




**BEVERAGE COOLER
INSTRUCTIONS MANUAL**

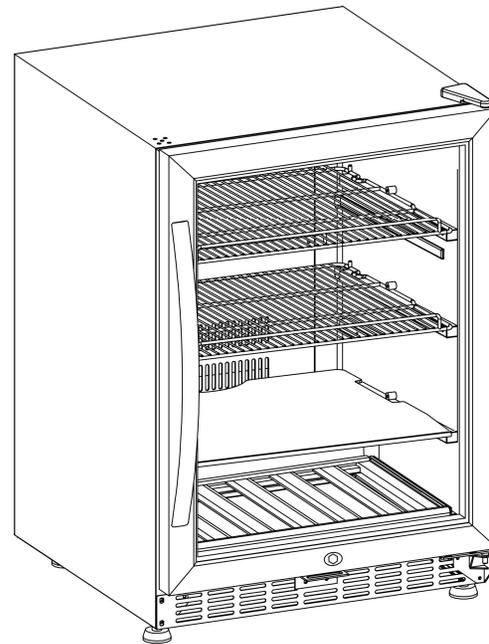


Model: USF-54BC

7. Electrical diagram

Dear Users:

Thanks for choosing our products. You will enjoy our kind, prompt, and considerate service after you buy our products. The model USF-54BC is serving for keeping both beverage & wine. This operation manual will be useful to help you know more about our product and its usage. In order to make it easy for your using, please read this manual carefully and do as the manual guidance. You will be satisfied with it. In addition, we sincerely hope that you will enjoy using our beverage coolers.

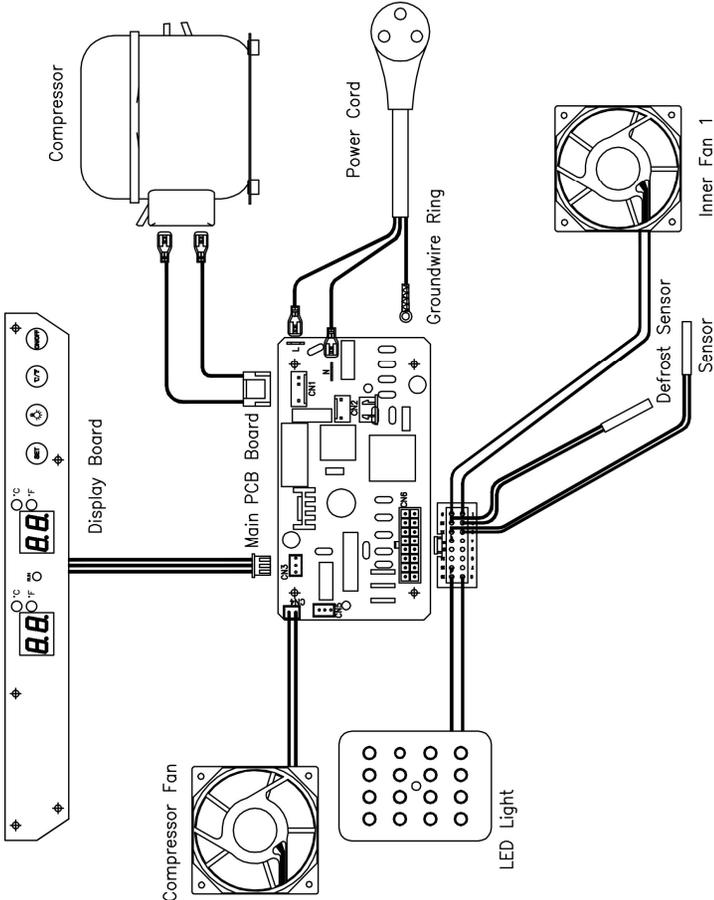

	The light button is "OFF".
Vibrations.	Check to ensure that the wine cooler is on level.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
The beverage cooler seems to make too much noise.	The rattling noise may come from the flow of the refrigerator, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of the refrigerator in your beverage cooler. Contraction and expansion of the inside walls may cause popping and crackling noises. The wine cooler is not on level.
The door will not close properly.	The beverage cooler is not on level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

Note: The replacement of the LED light must be done by a qualified technician. First to unscrew the 2 screws on the light cover, then take out the screw on the LED panel, and replace the LED light of same specification.

TABLE OF CONTENT

Notes -----4

Product Structure -----6

Installation -----7

Operation Instructions-----9

Care and Maintenance -----15

Troubleshooting -----17

Electrical diagram -----19

1. Important Safety Notes:

~ Warnings ~	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
<p>I Read all instructions before using the beverage cooler.</p> <p>I Keep children away from the beverage cooler. Never allow children to operate, play with, or crawl inside the appliance.</p> <p>I Never clean appliance parts with flammable fluids. Fumes can create a fire hazard or explosion.</p> <p>I While the beverage cooler stops working, please call our after-sale service department or other related technicians to check and repair. Never do it by yourself in case of an accident.</p> <p>I Once the power cord is damaged, find a professional technician or electrician to change for a new one. Never do it by yourself or continue to use so as to avoid danger.</p> <p>I Make sure that the plug is pulled while cleaning, moving, or repairing.</p> <p style="text-align: center;">-Keep these instructions-</p>	

~ Notes ~

- In order to avoid damage to the door seal, please make sure the door is totally opened while pulling out the movable shelves.
- Place the beverage cooler close to the power socket.
- Once the beverage cooler is stored with beverages and wine, please do not move it again.
- Make sure the beverage cooler is located in proper place in order to avoid easy access to the compressor in the back.
- Do not start the beverage cooler too frequently. The interval should be at least 5 minutes.
- Before throwing away your old cooler take off the door and leave the shelves in their original place so that children may not easily climb inside.
- If the beverage cooler is operated with R600a, flammable and explosive articles should not be put in or near the cabinet to avoid fire or explosions.

6. Troubleshooting

You can solve many common beverage cooler problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the service.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Beverage cooler does not operate.	Not plugged in. The appliance is turned OFF. The circuit breaker tripped or a fuse has blown.
Beverage cooler is not cold enough.	Check the temperature control setting. The external environment may require a higher setting. The door is opened too often. The door is not completely closed. The door gasket does not seal properly.
Turn ON and OFF frequently.	The room temperature is hotter than normal. A large amount of contents has been added to the wine cellar. The door is opened too often. The door is not completely closed. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work.	Not plugged in. The circuit breaker tripped or a fuse has blown. The bulb has burned out.

Ø **Power Failure:**

- Most power failures are corrected within a few hours and will not affect the temperature of your appliance if you minimize the frequency of opening the door. If the power is going to be OFF for a longer period of time, you need to take the proper steps to protect your contents.

Ø **Vacancy Time:**

- **Long vacancy:** If the appliance will not be used for several months, remove all the items and turn off the appliance. Clean and dry the interior thoroughly so as to restraint odours and mould. Leave the door slightly open at all time, if necessary.

Ø **Moving your Beverage Cooler:**

- Remove all the items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Make the door shut.
- Be sure the appliance stays secure in upright position during transportation. Also protect the outside of the appliance with a blanket or any similar item.


Ø **Energy Saving Tips:**

The beverage cooler should be located in the coolest area of the room, away from heat producing appliances and out of direct sunlight.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions on the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- The instructions shall include the substance of the following: This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices, and other working environments;
 - Farm houses, hotel/motel clients, and other residential type environments;
 - Bed and breakfast type environments;
 - Catering and similar non-retail applications.

2.Product Structure

(1) USF-54BC:

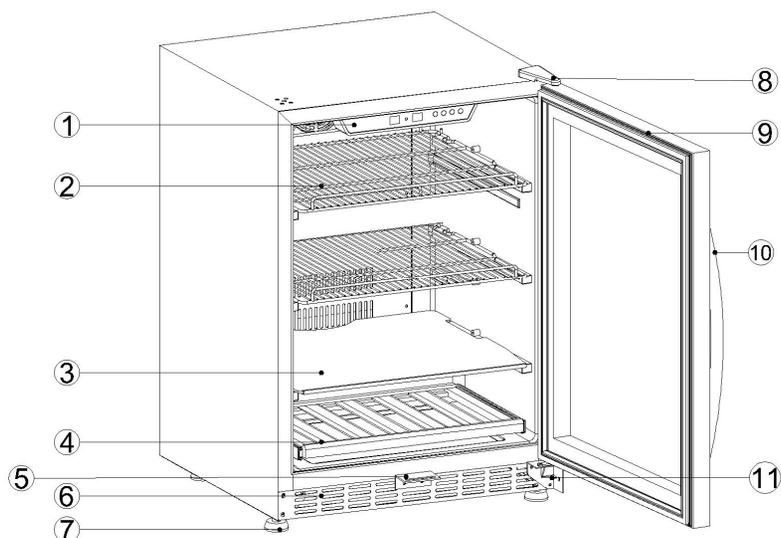

(1) Control panel (2)Wire shelf (3) Glass shelf

(4) Small beech shelf (5) Lock hook (6) The front vent

(7) Feet (8) Upper hinge (9) Glass door with lock/ gasket

(10) Handle (11) Lower hinge

3.Remove the screw of lower door hinge and the left side screw of the front vent (Fig 3); and then install the lower door hinge at the designated position on the opposite side (Fig 4).

4.Remove the screw of door handle, then remove the bottom screw of left side of the door and remove the lower supporter of the door.(Fig 5); Install the lower support of the door to the opposite side.(Fig 6).

5.Pull open middle section of the door gasket, then it will come out the handle screw hole.(Fig 7); remove the handle and install it on the opposite side.(Fig 8)

6.Install the upper door hinge to the opposite side and tighten the screws. (Fig 9)

7.Set glass door shaft to aim the shaft of lower door hinge (Fig 10);and then aim the upper door hinge (Fig 11); adjust the door and the cabinet is aligned and leveled, then tighten all the lock screws.


You also can call customer service for reversal instructions if it is necessary.

5. Care and Maintenance

Cleaning your Beverage Cooler:

- Wash the inside surfaces with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda with a quart of water.
- Wash the shelves with a mild detergent solution.
- Turn off the power, unplug the appliance, and remove all the items including shelves and racks.
- Wring excess water out of the sponge or cloth when cleaning the area of controls, or any electrical parts.
- Wash the outside cabinet with warm water and a mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

3.Installation

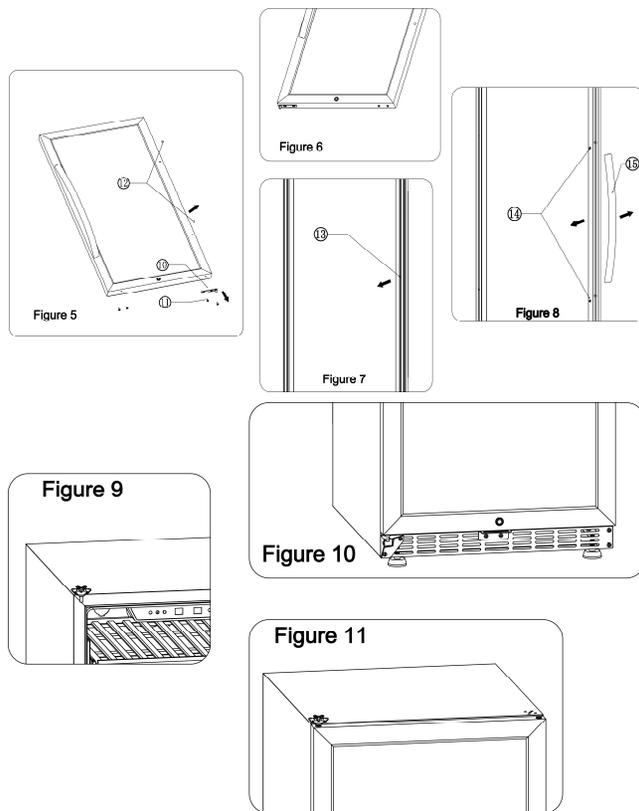

Ø **Before Using your Beverage Cooler:**

- Remove the exterior and interior packing.
- Before connecting the beverage cooler to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water with a soft cloth.

Ø **Installation:**

- The beverage cooler should be placed independently so as to make sure good heat dissipation. The back of the wine cooler should be at least 10 cm away from the wall.
- Place your beverage cooler on a floor that is strong enough to support it when it is fully loaded. To level your beverage cooler, adjust the front levelling leg at the bottom of the beverage cooler.
- Place the beverage cooler away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit to perform improperly.
- Avoid placing the unit in moist areas.
- Plug in the proper power socket. Make sure that the shape and voltage of the socket is consistent with the nameplate on the back of the beverage cooler.


NOTE: All parts removed must be saved to allow the door swing to be reversed

1. Use the sharp tools to pry open the decoration nail on the top of the cabinet and the cap of door spindle carefully. (Fig 1)

2. Open the door to an angle, unscrew the screw of the door hinges cover, remove the cover of the upper door hinge; then unscrew all the screws on the upper door hinge. Be careful to hold the glass door firmly after removing the screw and take off the door. (Fig 2)

Installation diagram for the built-in models:

USF-54 series:

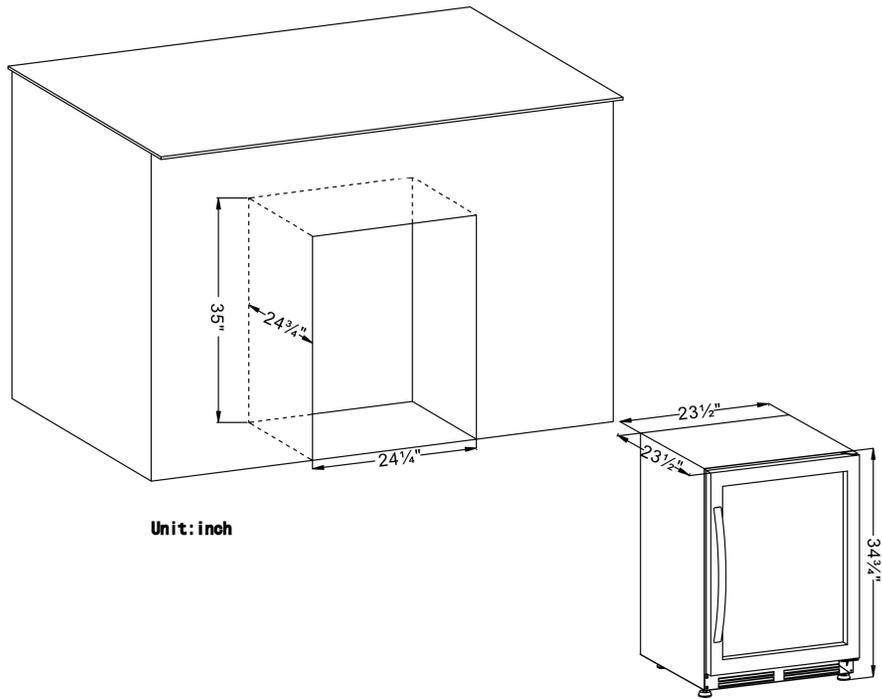


The cabinet was designed to safely store a maximum number of bottles.

It is kindly advised to layout the beverage and wine bottles evenly.

The best temperature for beverage is 0~10℃; If you storage beverage and wine at the same time ;the temperature better to set above 5℃


© ***Reversing the door swing of your appliance***

The unit is delivered to you with the door opening from the left side (hinge on right side). The door of this appliance is capable of opening from either the left or right side . To reverse the door swing of your cooler and open from the right side, please follow the instructions and diagram as follows.

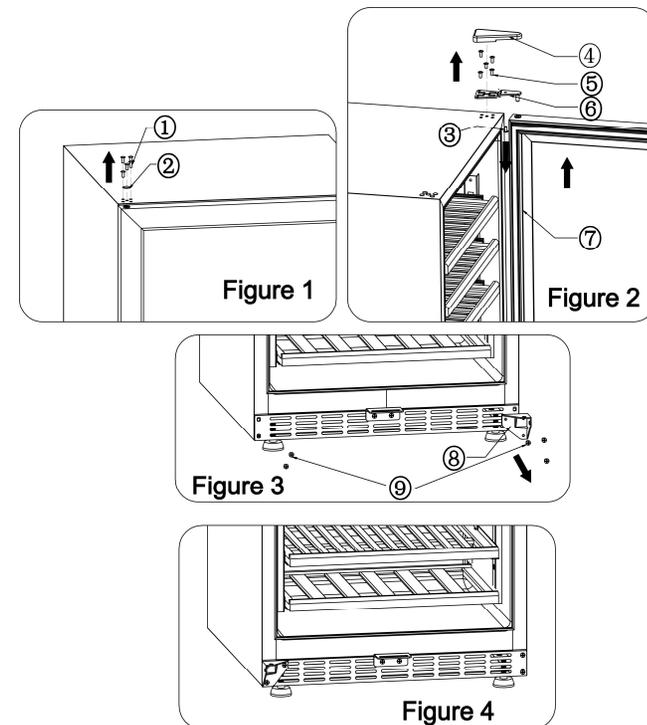

◎ **Layout and storage of beverage and wine bottles**

- Bottle loading sketch of wire shelf and glass shelf as below.

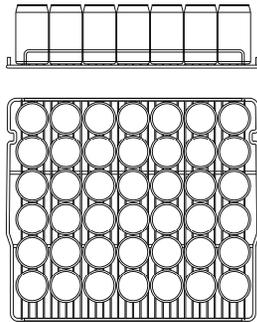


- Bottle loading sketch of the bottom small beech shelf as below.



4.Operation Instructions

Control Panel Below:

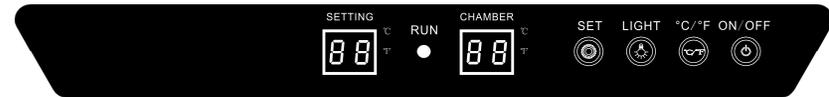

◎ **Display Windows**

- **RUN light** " ^{RUN} ○ " : Indicator light of compressor working. When the compressor is in operation, the red light is on. When the compressor stops operating, the red light is off.
- **SETTING** " ^{SETTING} 88 " : Display of the temperature you setting. The range of temperature setting is 0°C~10°C or 32°F~50°F.
- **CHAMBER** " ^{CHAMBER} 88 " : Display of the actual temperature inside the cabinet; The range is 0°C~37°C or 32°F~99°F.
- **°C/°F light** " ^{°C} / _{°F} " : When the °C light is on, it indicates Celsius temperature; When the °F light is on, it indicates Fahrenheit temperature.

◎ **Button Operation**

- **SET Button** "  " : Temperature setting button; Once you press the button, the temperature increase 1°C or 1°F. Temperature setting range is between 0°C~10°C or 32°F~50°F.

- **LIGHT Button** "  " : Cabinet light control button; Note: Once the light is turned on, it will automatically off after 10 minutes all out of protecting the beverage and wines inside.

- **°C/°F Button** "  " : Celsius and Fahrenheit conversion button;

- **ON/OFF button** "  " : Power on and off button; Press the button for 3 seconds, it starts; for press it 3 seconds again, it stops.

Note:

- If the unit is unplugged ,power cut, or turned off ,you must wait 3 to 5 minutes before restarting the unit.If you attempt to restart before this time delay, the Wine Cellar will not start.


- When you use the wine cellar for the first time or restart the wine cellar after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout.

This is normal and it is due to the length of the activation time. Once the wine cellar is running for a few hours everything will be back to normal.

© **Shelf Change**


Pull out or change the wire shelves as shown below:

- Pull out the wire shelf ,make the cove position toward to the pillar at two sides of the cabinet, then lift up and pull out the wire shelf.

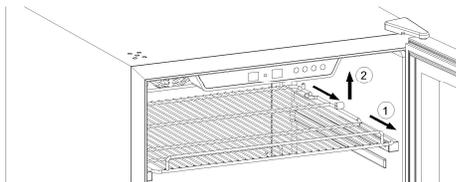


Pull out or change the glass shelf as shown below:

- Pull out the glass shelf ,make the cove position toward to the pillar at two sides of the cabinet, then lift up and pull out the glass shelf.

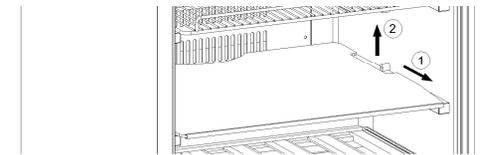

Do as the following shows if needing to pull out or change the bottom beech shelves.

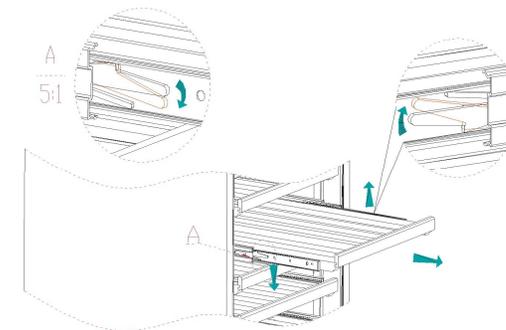

First, remove all the wine bottles from the shelves and pull the shelf out to the limit. Then press down the left limit of the sliding rail and, while pressing up the right one, pull the shelves out at this time. It should be easily pulled out if performing the three steps (press down the left limit, press up the right one, and pull out) at the same time.