Automatic modular flaker and nugget ice maker

Instructions and warnings



INTENTIONALLY LEFT BLANK

Dear Customer, Congratulations on having chosen a top-quality product, which is sure to live up to your expectations. Please **read this instruction manual carefully before using** your new modular automatic nugget ice machine.

TABLE OF CONTENTS

1 IMPORTANT ADVICE AND RECOMMENDATIONS 2
2 TECHNICAL DATA (Fig. 1) 8
3 ADVICE ABOUT TRANSPORTATION 8
4 UNPACKING 8
5 INSTALLATION 9
5.1 CONNECTION DIAGRAM (Fig. 3) 9
5.2 POSITIONING 9
5.3 CONNECTION TO THE WATER MAINS 9
5.3.a FILLING WITH WATER (Fig. 3) 10
5.3.b DRAIN (Fig. 3) 10
5.4 CONNECTION TO THE ELECTRICITY MAINS 10
6 START-UP 11
6.1 CLEANING INTERNAL PARTS 11
6.2 START-UP 11
6.3 CLEANING THE STEEL PARTS 11
7 MAIN CAUSES OF OPERATING FAILURE 11
8 OPERATION 12
9 MAINTENANCE 12
9.1 CLEANING THE FILTER OF WATER SUPPLY SOLENOID VALVE (Fig. 5) 13
10 CLEANING 13
11 SANITIZING 15
12 PERIODS AT A STANDSTILL 17

The figures in this manual are of a general nature. Some details may therefore differ depending on the specific model.
The Manufacturer declines all liability for any inaccuracies in this instruction manual due to printing or transcription errors. The Manufacturer also reserves the right to make any modifications to the products that may be necessary or useful, also in the interests of the user, without impairing the products' essential features of functionality and safety.

1 IMPORTANT ADVICE AND RECOMMENDATIONS




Warning sign ISO 7010-W021 (2011-05) – Risk of fire/flammable materials



[symbol IEC 60417-6375 (2017-03)]

WARNING: Connect to potable water supply only.



[symbol IEC 60417-6412 (2019-03)]

WARNING: minimum room floor area for installation of ice makers with R290 refrigerant charge >150g

Before installing and using the appliance, read the advice and recommendations contained in this instruction manual very carefully. They are given in order to ensure safe installation, use and maintenance of the appliance.

Before to start, make sure that the appliance is intact. If in doubt, do not use it and contact the authorized technical assistance center.

The ice maker can only be put into operation if the installation has been carried out in compliance with local laws and regulations and according to the instructions in this manual.

This appliance contains R290 refrigerant, a natural gas that is not harmful to the environment but is flammable.

R290 refrigerant is a colourless, odourless gas, and as such its presence cannot be identified by the senses. This condition requires special safety measures.

Installation, maintenance, repairs and any other intervention on the ice maker must only be performed by trained staff who are qualified in line with national laws to work with flammable gases. Works performed by unqualified staff may result in serious hazards.

Install the ice maker:

- in places with a minimum volume of 1 m^3 for every 8 grams of R290; the quantity is indicated on the data plate affixed to the appliance
- in places with flat, intact flooring, with no channels or grilles or other connections to the floors below, where in the event of leakage the gas could accumulate (R290 refrigerant is heavier than air and tends to accumulate downwards)
- away from electrical switches, live flames, hot surfaces and other sources of combustion or ignition.

Is absolutely forbidden for the user to access the appliance's cooling circuit, in case of necessity, call the authorized assistance.

⚠ WARNING: Do not use mechanical devices such as screwdrivers, sharp tools or other means to speed up the defrosting process.

⚠ WARNING: Keep the vents in the appliance casing or flush-mounting frame clear from obstructions.

⚠ WARNING: Do not damage the refrigerant circuit.

⚠ WARNING: Do not use electrical apparatus in the ice compartments.

⚠ WARNING: Do not keep explosive substances in the apparatus compartment, such as aerosol spray cans with flammable propellant.

⚠ THIS APPLIANCE IS INTENDED TO BE USED ONLY BY QUALIFIED AND TRAINED PERSONAL.

⚠ WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

In the event of damage to the refrigerant circuit: switch off the machine immediately, disconnect it from the power supply, ventilate the environment, call authorized service.

The user must keep this manual intact to allow it to be consulted throughout the useful life of the appliance.

Keep this manual safe and ensure that it is available for consultation near the appliance.
If lost or destroyed ask for another copy from the distributor, indicating the serial number and model of the appliance.
The manual describes the state of the art at the time of supply of the appliance, the constructor reserves the right to modify its appliances when deemed useful at any time, without having to update this document or document relating to previous production batches.
The technical staff in charge of the activities performed on the appliance are responsible for the application of the safety requirements laid down in this manual, and shall ensure that the authorised staff:

- are qualified to perform the required activities
- know and comply with the instructions laid down in this document
- know and apply the national safety requirements applicable to this appliance.

This manual forms an integral part of the modular automatic ice-scales maker (subsequently referred to as "the appliance"), and should be kept for future consultation.

In the event of the appliance being sold or transferred to another person, this manual must be handed over to the new user, in order to enable him to become familiar with the operation of the equipment and the corresponding advice and recommendations.

- always remove the plug from the power socket before proceeding with any cleaning or maintenance operations
- to ensure the appliance operates efficiently and correctly, it is essential to comply with the Manufacturer's instructions and to make sure that maintenance is performed by specially qualified personnel
- do not remove any of the panels or grilles
- do not rest objects on the appliance or in front of the ventilation grilles
- always lift the appliance to move it, even slightly. Do not push or pull it
- any use of the appliance other than for the production of ice using cold drinking water is to be considered as improper use
- do not obstruct the ventilation and heat-dissipation grilles, since poor aeration - in addition to reducing efficiency and causing poor operation - may also cause serious damage to the appliance
- if the appliance breaks down and/or operates in a faulty way, switch it off by means of the main switch fitted during the installation phase, remove the plug from the socket (if any), and turn off the water tap(s). Do not make any attempt to repair the appliance yourself. Contact only professionally qualified and authorized personnel
- in addition to rendering any form of warranty null and void, modifying (or attempting to modify) this appliance is extremely dangerous
- do not use the ice bin associated to this ice maker to cool or preserve food or drinks, as these operations could cause the drain

system to become clogged, thus leading to the bin filling up and water leaking out
- in the event of a failure, contact the dealer who sold you the appliance; he will be able to give you the address of your nearest Authorized Technical Service Centre. Always insist on having original spare parts mounted
- any specific information or diagrams regarding particular models will be attached to this manual.

⚠ Use of this electrical appliance requires compliance with certain fundamental rules; in particular:
- do not touch the appliance with wet or damp hands or feet
- do not use the appliance when you are barefoot
- do not use extensions in premises such as bathrooms or shower rooms
- do not tug on the power supply cable to disconnect it from the mains
- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Cleaning and user maintenance shall not be made by children without supervision
- supervise children to ensure that they do not play with the appliance

Should you decide to scrap appliance, first disconnect the power cable from the mains, and then cut the cable off.

In addition, proceed as follows:
- do not allow the refrigerant gas and oil in the compressor to disperse into the environment
- dispose of or recover the various materials according to the provisions established by the current laws in force in your Country

⚠ **IMPORTANT: this appliance contains flammable gas which could cause a hazard during transport and/or final treatment.**

This symbol means that this product should not be treated as a household waste. To prevent potential negative consequences for the environment and health, be sure this product is correctly disposed of and recycled.
For information on the disposal and recycling of this product, contact your Distributor or the Waste Treatment Service.

⚠ **The Manufacturer shall not be liable for any damage to the environment, animals, persons or objects caused by incorrect installation.**

2 TECHNICAL DATA (Fig. 1)

The voltage and frequency are given on the data plate on the appliance. Refer to this data plate to check compliance.
Voltage (1), power (2), model (3), serial No. (4), Manufacturer (5).

The weighted equivalent continuous sound level A of this appliance is less than 70 dB(A). The measurements were taken 1 metre from the surface of the appliance and 1.60 metres above ground, during ice production.

The wiring diagram is stuck inside front panel.

3 ADVICE ABOUT TRANSPORTATION

The net weight and the weight including packaging of the appliance are given on the cover of this instruction manual. Please refer to the instructions on the packaging in order to correctly transport and lift the appliance.

To prevent the oil in the compressor from flowing back into the coolant circuit, always make sure that the appliance is kept upright during transport, storage, and handling. Follow the instructions given on the packaging.

4 UNPACKING

The appliance must be installed by authorized personnel, in compliance with the current laws in force and the Manufacturer's instructions.

Once you have removed the packaging according to the instructions on the box, MAKE SURE THAT THE APPLIANCE IS IN A PERFECTLY GOOD CONDITION. IF IN DOUBT, DO NOT USE IT AND IMMEDIATELY CONTACT THE DEALER who sold it to you.

All the packaging items (plastic bags, cardboard, polystyrene foam, nails, etc.) must be removed and put out of the reach of children, as they are potential sources of danger.

With the pallet resting completely on the ground, lift the appliance with lifting gear suited to its weight and separate it from the wooden pallet.

NOTE FOR INSTALLER:

This operation must only be performed by professionally qualified and authorized personnel.
The appliances contain threaded holes for hooking eyebolts (Fig. 2). To prevent damage to the appliance, the lifting bolts should be kept vertical during lifting.

5 INSTALLATION

5.1 CONNECTION DIAGRAM (Fig. 3)

6. hole for power supply cable
7. water supply pipe for ice making
8. water supply pipe for water cooling
9. water drainage pipe
10. cooling water drainage pipe

5.2 POSITIONING

⚠ **The appliance must be installed in a hygienically clean location; it is advisable to avoid rooms like cellars and storerooms, because failure to meet hygiene requirements is likely to lead to the formation and proliferation of bacteria in the appliance.**

The appliance can operate at an ambient temperature of between 10°C and 43°C. The best performance will be obtained by installing the appliance in a place with an ambient temperature of between 10°C and 35°C and a water temperature of between 3°C and 25°C.

Avoid direct exposure to sunlight and do not install near heat sources.

⚠ This appliance:

- **must be installed in a place where it can be supervised by skilled personnel**
- must not be used outdoors
- must not be installed in damp places or where it is liable to be sprayed with water
- must not be cleaned with jets of water
- must be allowed a free space for the fto
- in order to carry out the ordinary clean operation od the evaporator, the top of the appliance must be accessible

⚠ **The appliance must be installed on a bin.**

⚠ **The manufacturer declines all liability for installation on bins made by other manufacturers.**

5.3 CONNECTION TO THE WATER MAINS

⚠ **IMPORTANT:**

- the appliance must be connected to the water mains by professionally qualified personnel in accordance with the Manufacturer's instructions
- this appliance must be only be supplied with cold water for human consumption (drinking water)
- the operating pressure must be between 0.1 and 0.6 MPa

- a tap must be installed between the water mains and each feed pipe of the appliance, so that the water supply may be shut off if necessary
- where the feed water is particularly hard, you are advised to install a polyvalent cartridge filter. Any solid particles (e.g. sand) may be eliminated by installing a mechanical filter, which must be periodically inspected and cleaned. These devices must comply with the standards in force in the Country of use
- never turn the water supply taps off when the appliance is working
- only new hose-sets supplied with the appliance are to be used to connect the appliance to water mains, old hose-sets should not be reused
- in accordance with the EN 61770, it is necessary to install a backflow prevention valve (supplied with the ice maker) for each water inlet. The supplied valve(s) must be installed between the inlet pipe(s) and the water inlet solenoid valve, in order to assure the backflow prevention

5.3.a FILLING WITH WATER (Fig. 3)

Connect water supply solenoid valve (7) at the back of the appliance to the mains water supply.
Also connect cooling water supply valve for condenser (8).

Connect appliance to the mains water supply in accordance with local regulations.

5.3.b DRAIN (Fig. 3)

Connect drainage connector (9) located at the back of the appliance to the sewer network in accordance with local regulations.
Check that:

- the water drain hose is not throttled at any point throughout its length
- the drain hose slopes downwards by at least 15%

Also connect cooling water drainage connector (10) to a drain.

It is advisable to drain the water straight into an open drain trap.

5.4 CONNECTION TO THE ELECTRICITY MAINS

⚠ **IMPORTANT:**

- the appliance must be connected to the electricity mains by professionally qualified personnel in accordance with the Manufacturer's instructions
- before connecting the appliance to the electricity mains, make sure that the mains voltage rating corresponds to the value indicated on the rating plate
- make sure that the appliance is connected to an efficient earthing system
- make sure that the capacity of the power supply system suits the maximum power value indicated on the rating plate of the appliance
- the appliance is designed to be permanently connected to the mains power supply, it must be fitted with an omnipolar thermomagnetic circuit breaker (6 in Fig. 3) with a minimum contact opening distance of 3 mm, that provides full disconnection under overvoltage category III conditions, which meets current national safety standards, fitted with fuses, with associated residual current device, positioned in such a way that it can easily be reached. **This operation must be performed by a skilled technician**

- make sure that you fully uncoil the power supply cable and check that it is not crushed in any way
- should the supply cable be damaged, it must be replaced by a specialized technician using a special cable available from the Manufacturer or from the Technical Service Centres

6 START-UP

6.1 CLEANING INTERNAL PARTS

The appliance will have already been cleaned in the factory. However, you are advised to wash the internal parts again before using the appliance. Make sure that the power supply cable is unplugged before carrying out the above cleaning operation.

See cleaning and sanitizing paragraphs for information regarding these operations.

Use ordinary washing-up liquid or a water and vinegar solution for cleaning operations; after cleaning, rinse thoroughly with cold water and discard the ice produced during the first 30 minutes after cleaning, together with any ice present in the bin.

It is advisable to avoid using abrasive detergents or powders, since these might damage the finish.

6.2 START-UP

Once the appliance has been correctly connected to the electricity mains, water mains and water drain system, it can be started up as follows:

a) turn on the water supply taps
b) switch on the power supply by means of the relative switch fitted during the installation phase
c) turn on “ON” position the rotor main switch on front panel (11 fig 4)

⚠ The appliance will begin to produce ice 10 minutes after start-up. Every time the appliance is started up, the rotation sensor will perform a preliminary check on its operation during this period.

6.3 CLEANING THE STEEL PARTS

The structure frame and all external panel are in AISI 304 stain stell material.
The appliance was cleaned initially in the factory. For subsequent cleaning operations on the steel parts of the machine, comply with the instructions below:
Do not allow saline solutions to dry or pool on the external steel components of the machine, as this may lead to corrosion.
Avoid contact with ferrous material (scourers, forks, ladles, scrapers, etc.) to prevent corrosion, contamination from ferrous particles circulating in the receptacle.
Carefully clean the stainless-steel parts with a damp cloth, water and soap or common, non-abrasive chlorine or ammonia based detergents.

7 MAIN CAUSES OF OPERATING FAILURE

Should the appliance fail to produce ice, before calling on the Authorized Technical Service Centre, first check carefully that:

- the water supply taps, fitted during the installation phase, have been turned on
- check that there is no power cut
- check that the rotation sensor is not signalling an alarm

Furthermore:
- if there is excessive noise, make sure that the appliance is not touching furniture or sheet metal which can give rise to noise or vibrations
- should any trace of water appear, check the drain hole of the bin to ensure that it is not clogged, that the water fill and drain pipes are correctly connected and are not throttled or damaged
- make sure that the temperature of the air or water does not exceed the installation limit values (see paragraph 5.2)
- make sure that the water inlet filter is not clogged (see paragraph 9.1)

If the fault persists after the above inspections have been made, turn off the electric power source by means of the switch fitted during the installation phase, turn off the taps connecting the appliance to the water mains, and contact the nearest Authorized Technical Service Centre.

To obtain a faster and more efficient reply when you call the Centre, state the model of the appliance precisely, together with its serial number or manufacturing number. This information is given on the serial N° plate (Fig. 1) affixed to the rear of the appliance and on the cover of this instruction manual.

8 OPERATION

The appliance has a thermostat which stops ice production when the ice accumulated in the bin reaches the probe connected to the thermostat. When ice is taken from the bin, the thermostat will automatically reactivate ice-cube production, thus creating a new supply of ice.

The appliance is equipped with a rotation sensor which guarantees its correct operation; when the appliance is switched on, it is necessary to wait for 10 minutes while the rotation sensor performs a preliminary check on its correct operation.

The key to the rotation sensor's error signals is affixed to the appliance.

9 MAINTENANCE

All the operations described in this paragraph must be carried out only after the electric power and water supplies have been disconnected, as described previously, by professionally qualified and authorized personnel.

The following activities listed are considered as ordinary maintenance.
You are advised to ask your dealer to draw up a scheduled maintenance contract that will cover the following:
- cleaning the filter located on the water supply solenoid valve (see clause 10.1)
- cleaning and sanitizing the ice-tray
- checking the operating cycle
- cleaning and sanitizing the appliance (see clause 10 and 11)

Activities referred to components as compressor, gear motor and evaporator are to be considered as extraordinary Maintenance and must be carried out by professionally qualified and authorized personnel.

The frequency of cleaning and sanitizing operations can vary, depending on:
- temperature and environmental conditions
- temperature and quality of water (hardness, presence of grit, etc.)
- quantity of ice produced, or time of use of ice maker
- periods of non-use of ice maker

⚠ **Do not use corrosive substances to remove limescale from the appliance, because this will invalidate the warranty, and may cause serious damage to the materials and components of the appliance.**

Do not use jets of water to clean the appliance.

9.1 CLEANING THE FILTER OF WATER SUPPLY SOLENOID VALVE (Fig. 5)

⚠ At least every two months, clean the filter located on the water inlet solenoid valve, proceeding as follows:
- **switch off the electric power supply** by means of the switch, fitted during installation
- **shut off the water supply** by turning the taps fitted during installation
- disconnect the water supply pipe from solenoid valve at the back of the appliance
- using a pair of pliers, remove the filter from its seat without damaging the water feed pipe connector
- place the filter under a strong jet of water to remove residue, but replace the filter if it is excessively dirty

After having carried out the cleaning operations, refit the filter and hose pipe, taking the necessary precautions described earlier in this instruction manual.

When the operations have terminated, turn on both the electricity supply and water supply.

10 CLEANING

All the operations described in this paragraph must be carried out only after the electric power and water supplies have been disconnected, as described previously, by professionally qualified and authorized personnel.

⚠ **Do not use corrosive substances to remove limescale from the appliance, because this will invalidate the warranty, and may cause serious damage to the materials and components of the appliance.**

Do not use jets of water to clean the appliance.

⚠ **All cleaning operations must be carried out only after the electric power and water supplies have been disconnected, as described previously, by professionally qualified and authorized personnel.**

Follow the instructions given in the cleaning and sanitizing clauses supplied with the appliance.

⚠ **IMPORTANT:**
- **all the ice produced during the first 30 minutes after cleaning and sanitizing operations, together with any ice present in the bin, must be discarded**
- **when the appliance is cleaned and sanitized, its bin must also be cleaned and sanitized**

Complete sanitizing can only be carried out only by the Authorized Technical Service Centres, and must be done regularly depending on the conditions of use of the appliance, the chemical and physical features of the water, and after every period in which the appliance has remained at a standstill for any length of time.

You are advised to ask your dealer to draw up a scheduled maintenance contract that will cover the following:
- cleaning the filter located on the water supply solenoid valve (see clause 10.1)
- cleaning and sanitizing the ice-tray
- checking the operating cycle
- cleaning and sanitizing the appliance (see clauses 10 and 11)

The frequency of cleaning and sanitizing operations can vary, depending on:
- temperature and environmental conditions
- temperature and quality of water (hardness, presence of grit, etc.)
- quantity of ice produced, or time of use of ice maker
- periods of non-use of ice maker

TO ENSURE CORRECT CLEANING AND SANITIZING OF THE APPLIANCE, PERFORM THE OPERATIONS DESCRIBED IN THIS MANUAL AT LEAST ONCE A MONTH.

⚠ **IMPORTANT:**
- the operations described in this manual must only be performed by skilled, authorized personnel
- the ice maker must be installed in a hygienically clean location; avoid premises such as cellars and storerooms, because poor hygiene promotes formation and proliferation of bacteria in the ice maker
- do not use corrosive substances to remove limescale from the appliance, because this will invalidate the guarantee, and may cause serious damage to the materials and components of the appliance
- gloves suitable to protect against cuts must be worn when performing all operations involving handling of sheet metal parts in particular
- gloves suitable to protect the skin against the substances used must be worn when performing all cleaning and sanitizing operations

- wear suitable goggles during cleaning and sanitizing operations to protect the eyes against splashes of the substances used
- take care not to spill water or solutions on the internal components of the appliance, the wiring or the power cable

1. switch off appliance and **disconnect from power supply mains**
2. close ice-making water supply tap, leaving the cooling water supply tap open
3. prepare approximately 8 litres (2 gallons) of 25%-solution of water and white vinegar to be used to clean the appliance
4. remove top panel of appliance by loosening fixing screws (Fig. 6)
5. remove lid of water supply basin (Fig. 7)
6. connect appliance to power supply mains
7. pour the water and vinegar solution into the basin, taking care to keep the basin full

⚠ **IMPORTANT:**
An excessively low level in the basin causes the rotation sensor to operate and shut down the appliance. To restart the appliance, top up the basin and wait for 10 minutes, to allow time for the rotation sensor to enable its operation.

8. leave appliance running, topping up the level of solution in the basin until at least 4 litres (1 gallon) of solution have been used
9. open ice-making water supply tap and leave appliance to operate for at least 5 minutes, without adding any solution to the basin
10. **discard all ice produced during cleaning operations**
11. prepare to perform the sanitizing operations described in the next chapter

11 SANITIZING

Use a 200 mg/l solution of sodium hypochlorite and water (or a solution of 1/2 ounce of normal bleach to 1 gallon of water), or solution in compliance with 40 C.F.R. 180.940.

For the directions for use and concentrations, please refer to those shown on the packaging and recommended by the manufacturer.
We recommend using the solution at the temperature of 25°C.

⚠ **WARNING:**
Before connecting the appliance to the power supply mains, ensure that all cables and wiring of the appliance are perfectly dry.

1. prepare approximately 8 litres (2 gallons) of sanitizing solution to be used to sanitize the appliance
2. switch off appliance, **disconnect from power supply mains** and close ice-making water supply tap, leaving cooling water tap open
3. pour solution into basin, taking care to keep basin full

⚠ **IMPORTANT:**

An excessively low level in the basin causes operation of the rotation sensor, which shuts down the appliance. To restart apparatus, top up basin and wait for 10 minutes, to allow time for the rotation sensor to enable the operation

4. connect appliance to power supply mains
5. leave appliance running, topping up the level of the solution in the basin until at least 4 litres (1 gallon) of solution have been used
6. open the ice-making water supply tap and leave the appliance to operate for at least 5 minutes, without adding any solution to the basin
7. switch off appliance and **disconnect from power supply mains**
8. switching off the rotor switch (11 in fig 4) and remove front panel (Fig. 5)
9. disconnect the micro-switch from the ice maker wiring (Fig. 8) and extract the thermostat probe (13 in Fig. 8) from its seat in the ice chute, **taking care not to damage it**
10. remove micro-switch from its seat, turning it counter-clockwise (Fig. 9)
11. remove the insulating cap from ice exhaust (Fig. 10)
12. remove ice exhaust (15 in Fig. 11) and extract ice chute (16 in Fig. 11) from its hole in base plate
13. clean with common washing-up liquid the lid of water basin, the ice exhaust (15 in Fig. 11) and the internal part of ice chute, **taking care not to damage the mechanism inside ice exhaust that operates micro-switch.** Use a brush with soft bristles and a non-abrasive sponge to remove any sediments
14. clean with the same washing-up liquid the ice wiper (18 in Fig. 11), using a brush with soft bristles and a non-abrasive sponge to remove any sediments
15. rinse with plenty of cold water the ice wiper (18 in Fig. 11), the lid of water basin, the internal part of ice chute and ice exhaust (15 in Fig. 11)
16. spray sanitizing solution on ice wiper (18 in Fig. 11) and let it work for at least 30 minutes
17. wipe the lid of water basin, the ice exhaust (15 in Fig. 11) and the internal part of ice chute with sanitizing solution
18. rinse with plenty of cold water the ice wiper (18 in Fig. 11)
19. rinse with plenty of cold water and then dry carefully the lid of water basin, the ice chute
    1. (16 in Fig. 7) and ice exhaust (15 in Fig. 11)
20. refit the insulating cap on ice exhaust (Fig. 10)
21. refit micro-switch in its seat, turning it/them clockwise. **Check the mechanism that operates micro-switch does push on the switch(es)**, otherwise slightly separate the mechanism from micro-switch
22. refit ice chute (16 in Fig. 11), inserting it in its hole in base plate
23. refit ice exhaust (15 in Fig. 11)
24. insert the thermostat probe (13 in Fig. 8) in its seat in ice chute, **taking care not to damage it**
25. refit the lid of water basin
26. connect micro-switch to the ice maker wiring (Fig. 8)
27. **check that all cables and wiring of the appliance are perfectly dry**
28. refit all the panels of the appliance removed during cleaning and sanitizing operations and secure them with the fixing screws
29. **discard all ice produced during sanitizing operations**

The ice maker can now be reactivated as specified in the instruction book.

⚠ **IMPORTANT:**
All the ice produced during the first 30 minutes after cleaning and sanitizing operations must be discarded.

When the appliance is cleaned and sanitized, its bin must also be cleaned and sanitized.


12 PERIODS AT A STANDSTILL

If you do not intend to use the appliance for a certain period of time, proceed as follows:


- switch off the electric power source by means of the switch (6 in Fig. 3)
- shut off the water supply by turning off the water supply taps
- carry out all the operations envisaged for scheduled maintenance of the appliance (see chapter 9)
- clean filter of water supply solenoid valve as described in chapter 9.1

INTENTIONALLY LEFT BLANK


1

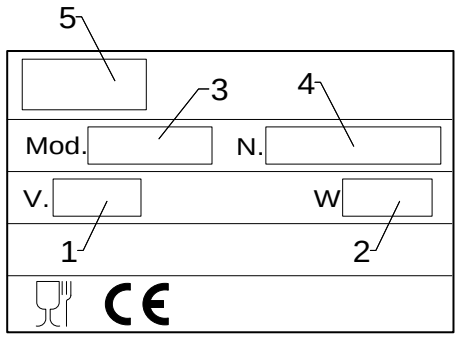


2

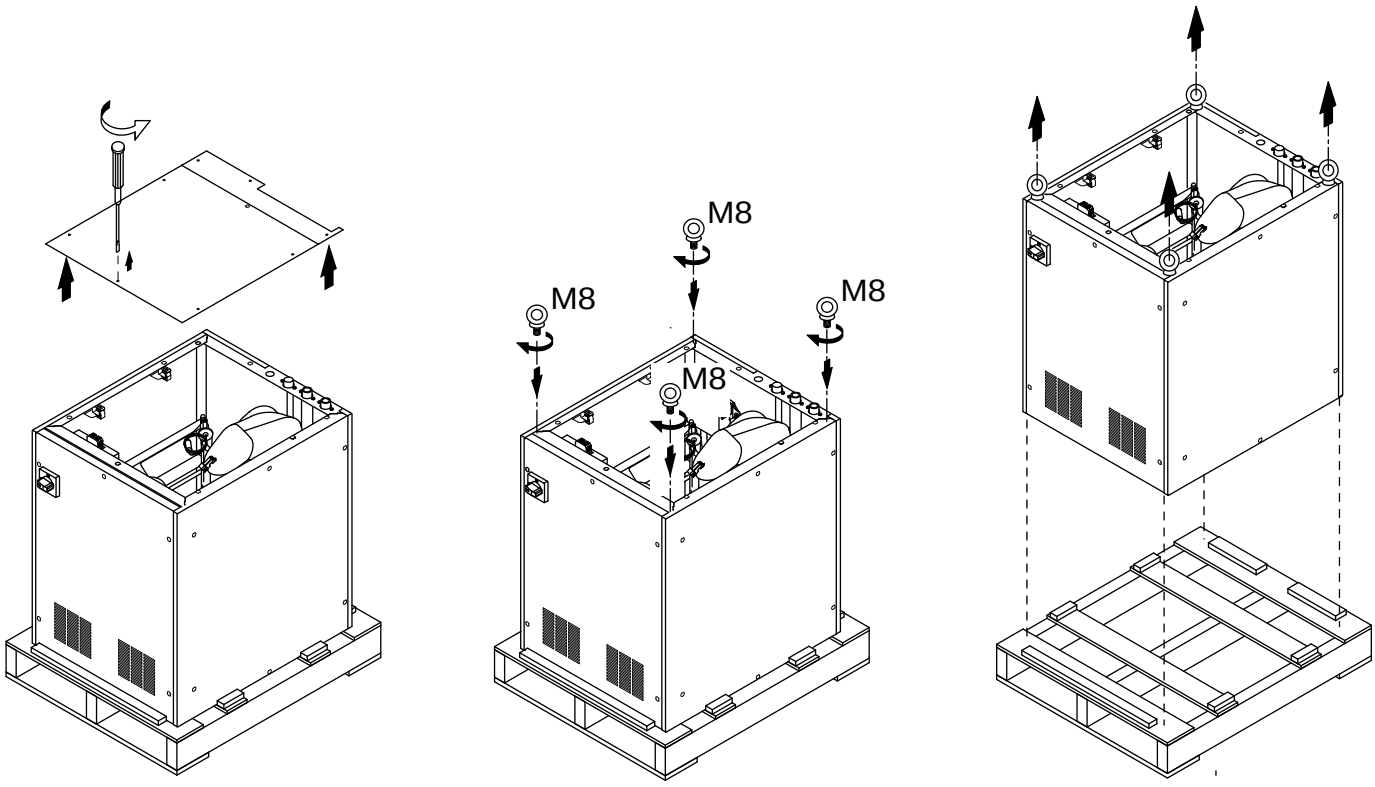


3

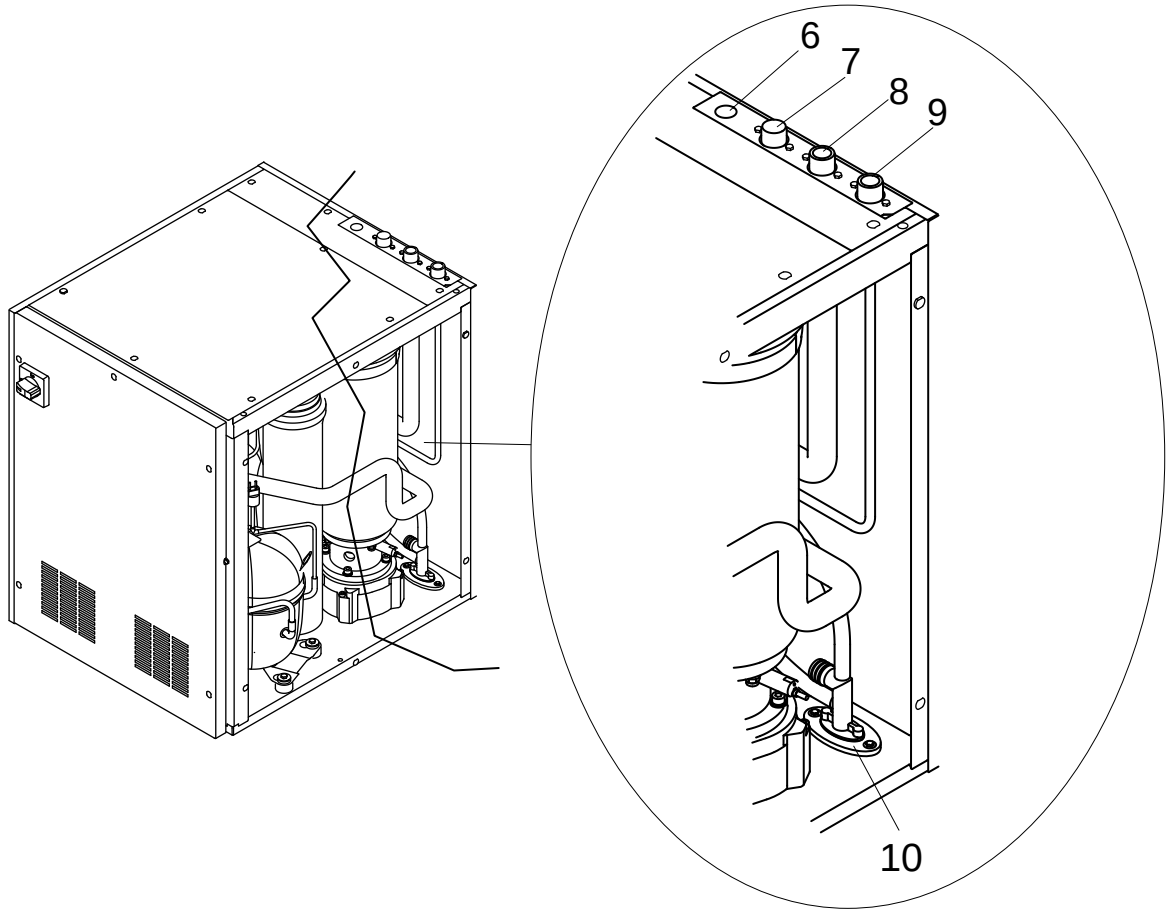


4

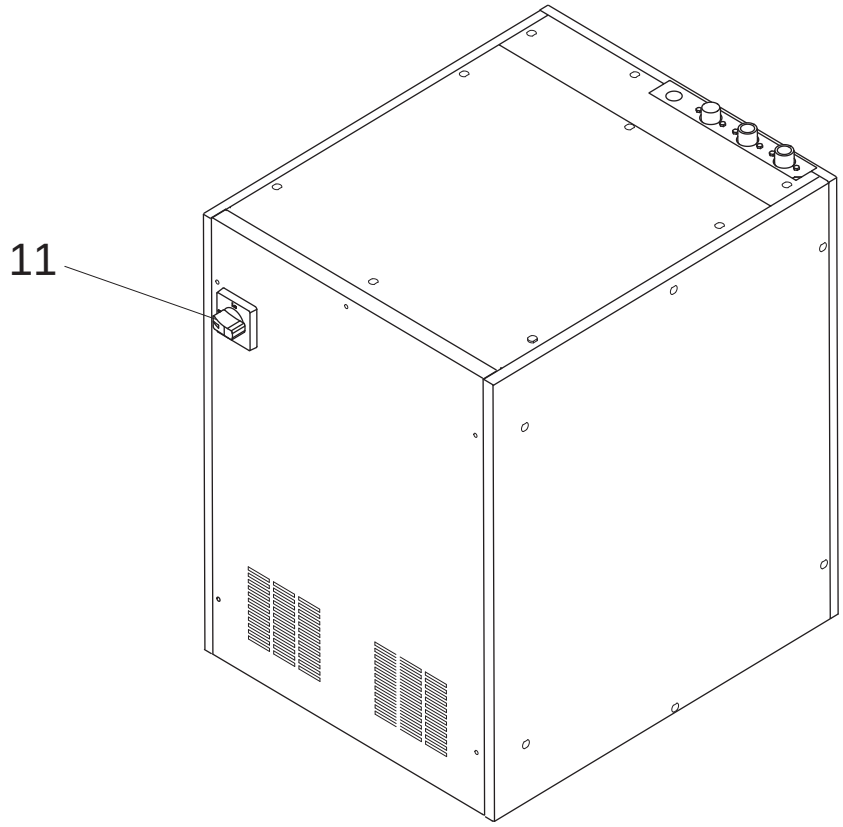


5

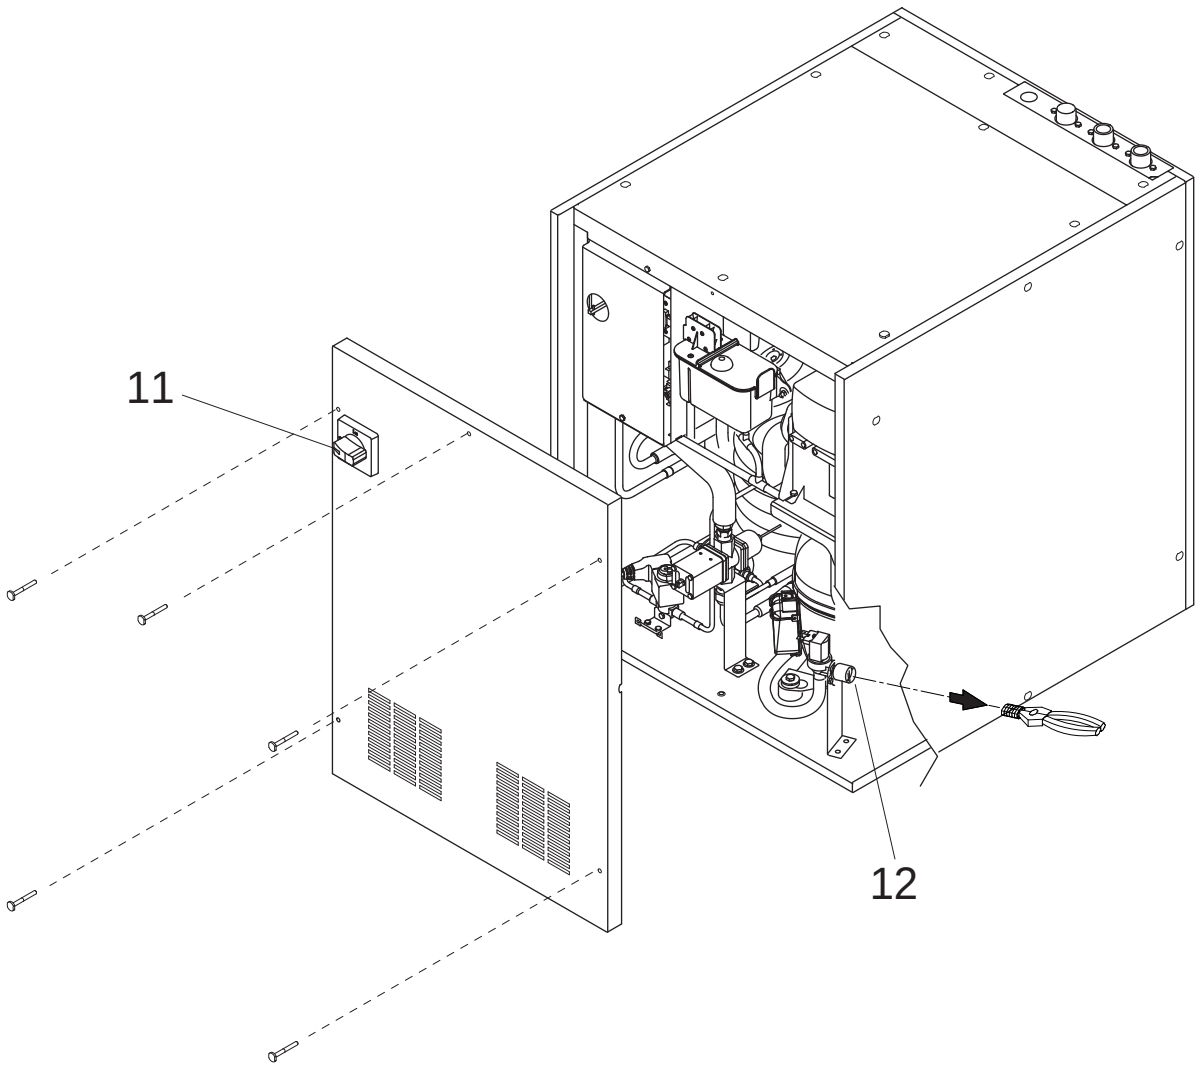


6

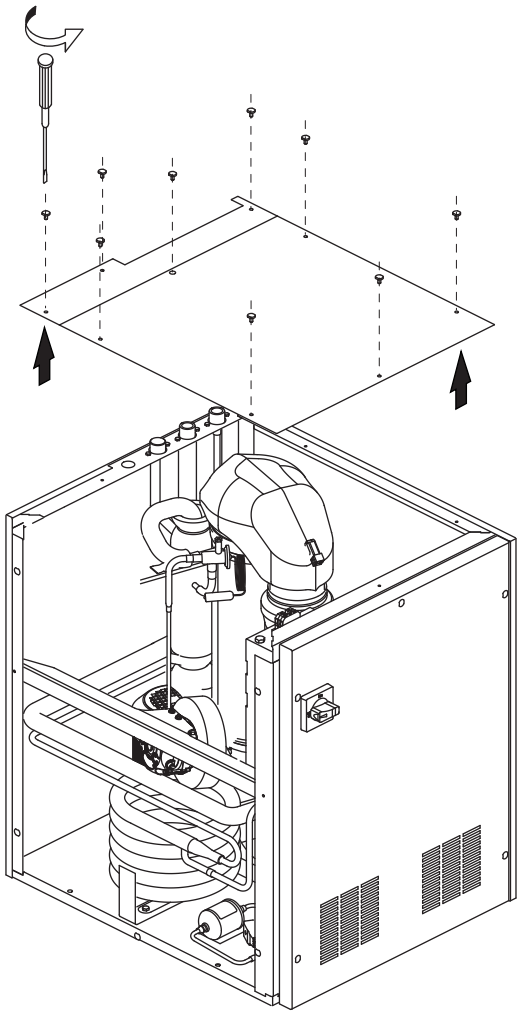


7

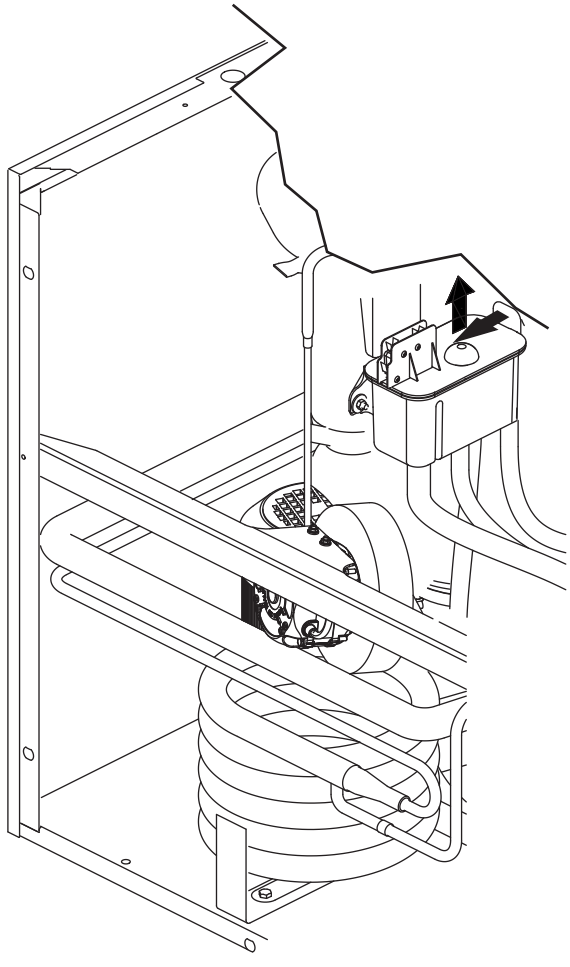



8

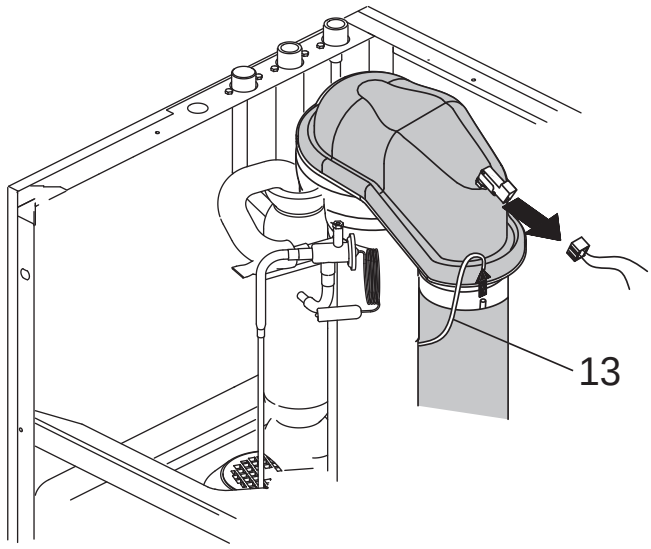

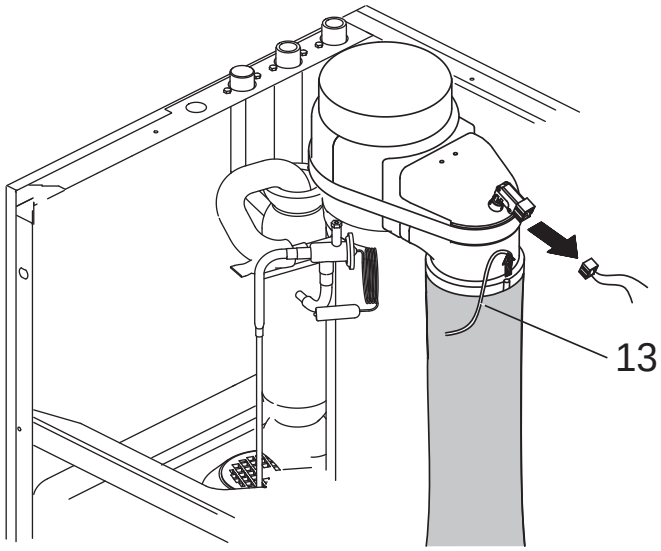


9

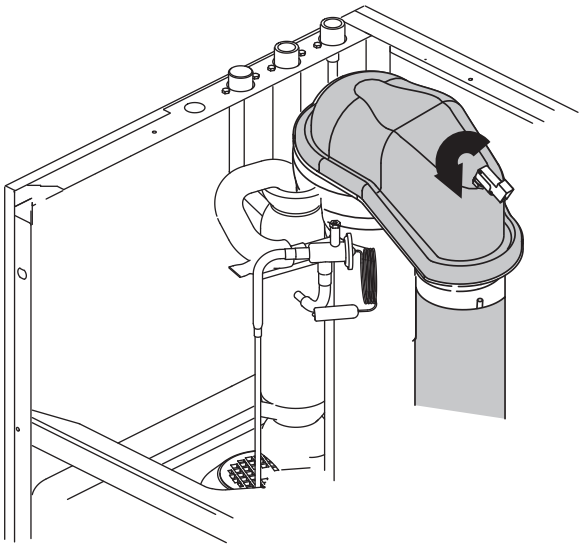


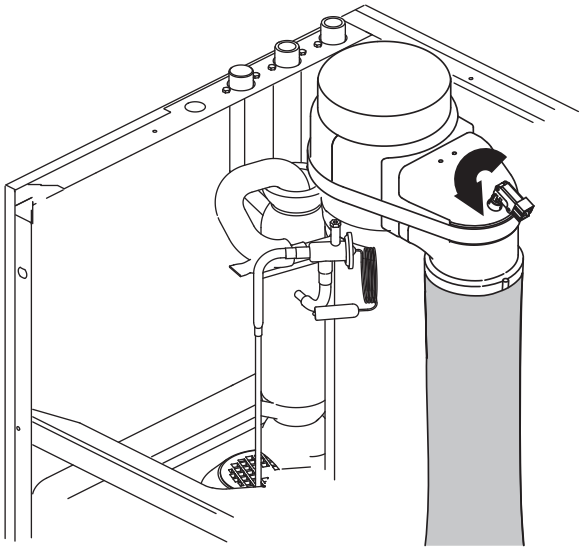


10

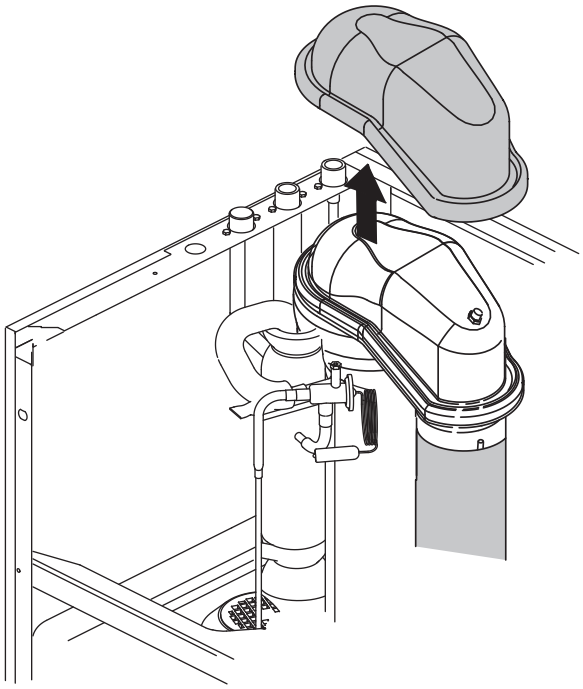

11

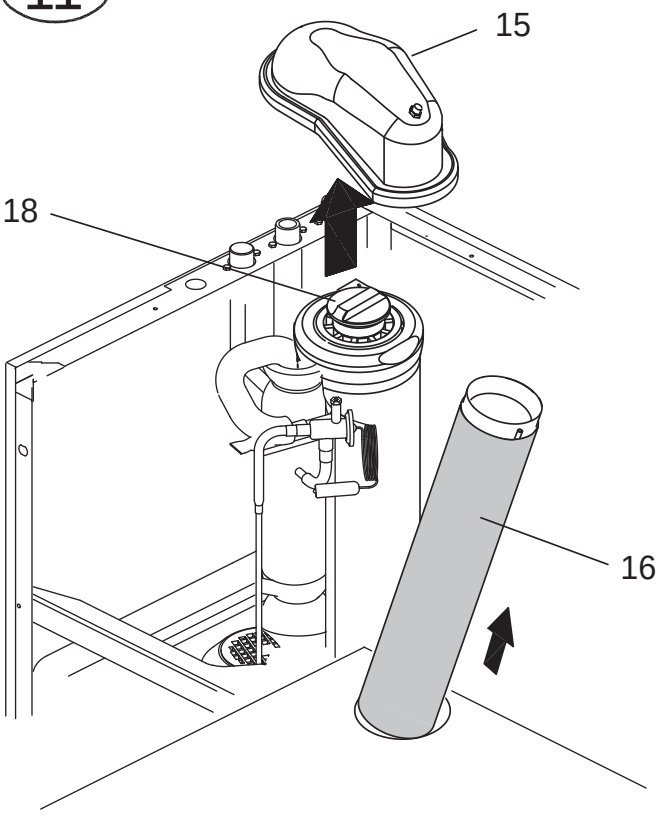

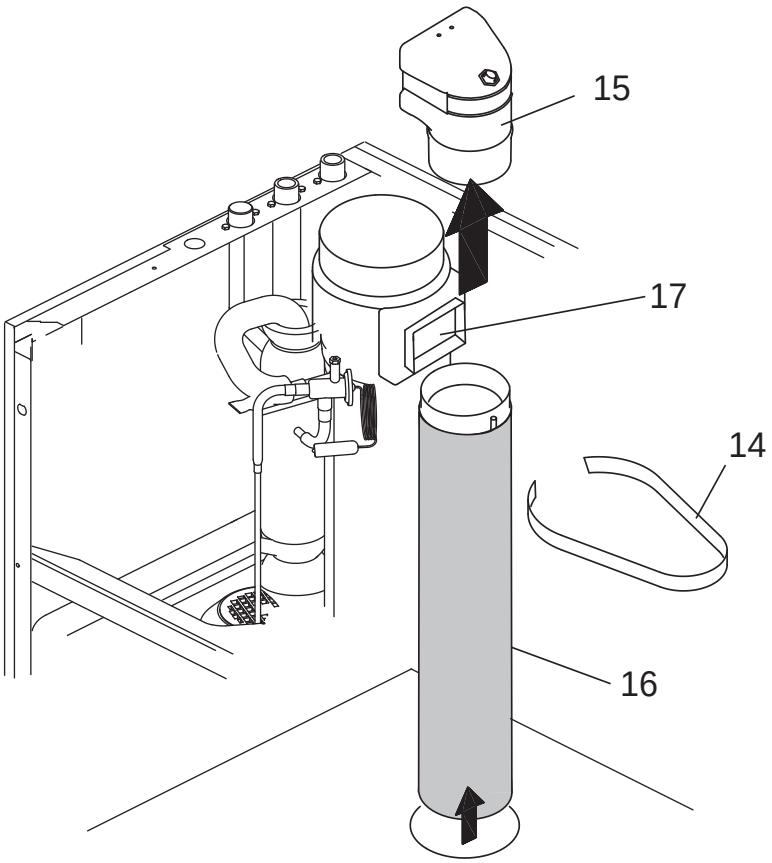

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

It is strictly forbidden to reproduce this instruction manual or any part thereof.

242305 - Rev 00